

Home > Farebox DCU (2 Finger) Re-boot

## Farebox DCU (2 Finger) Re-boot

## **Reboot DCU**

From time to time the DCU may require to be rebooted due to various issues. In order to reboot the DCU you must power it down by simultaneously pressing the keys indicated below. Pressing the enter key will reboot the DCU.

Loading Player...

Source URL: https://mtsnet.demosite.us/departments/sdtc-operator-training/farebox-training-videos/fareboxdcu-2-finger-re-boot